




# Olympus VR-350 Power Button Replacement

Remove and replace a broken power button.

Written By: Adri

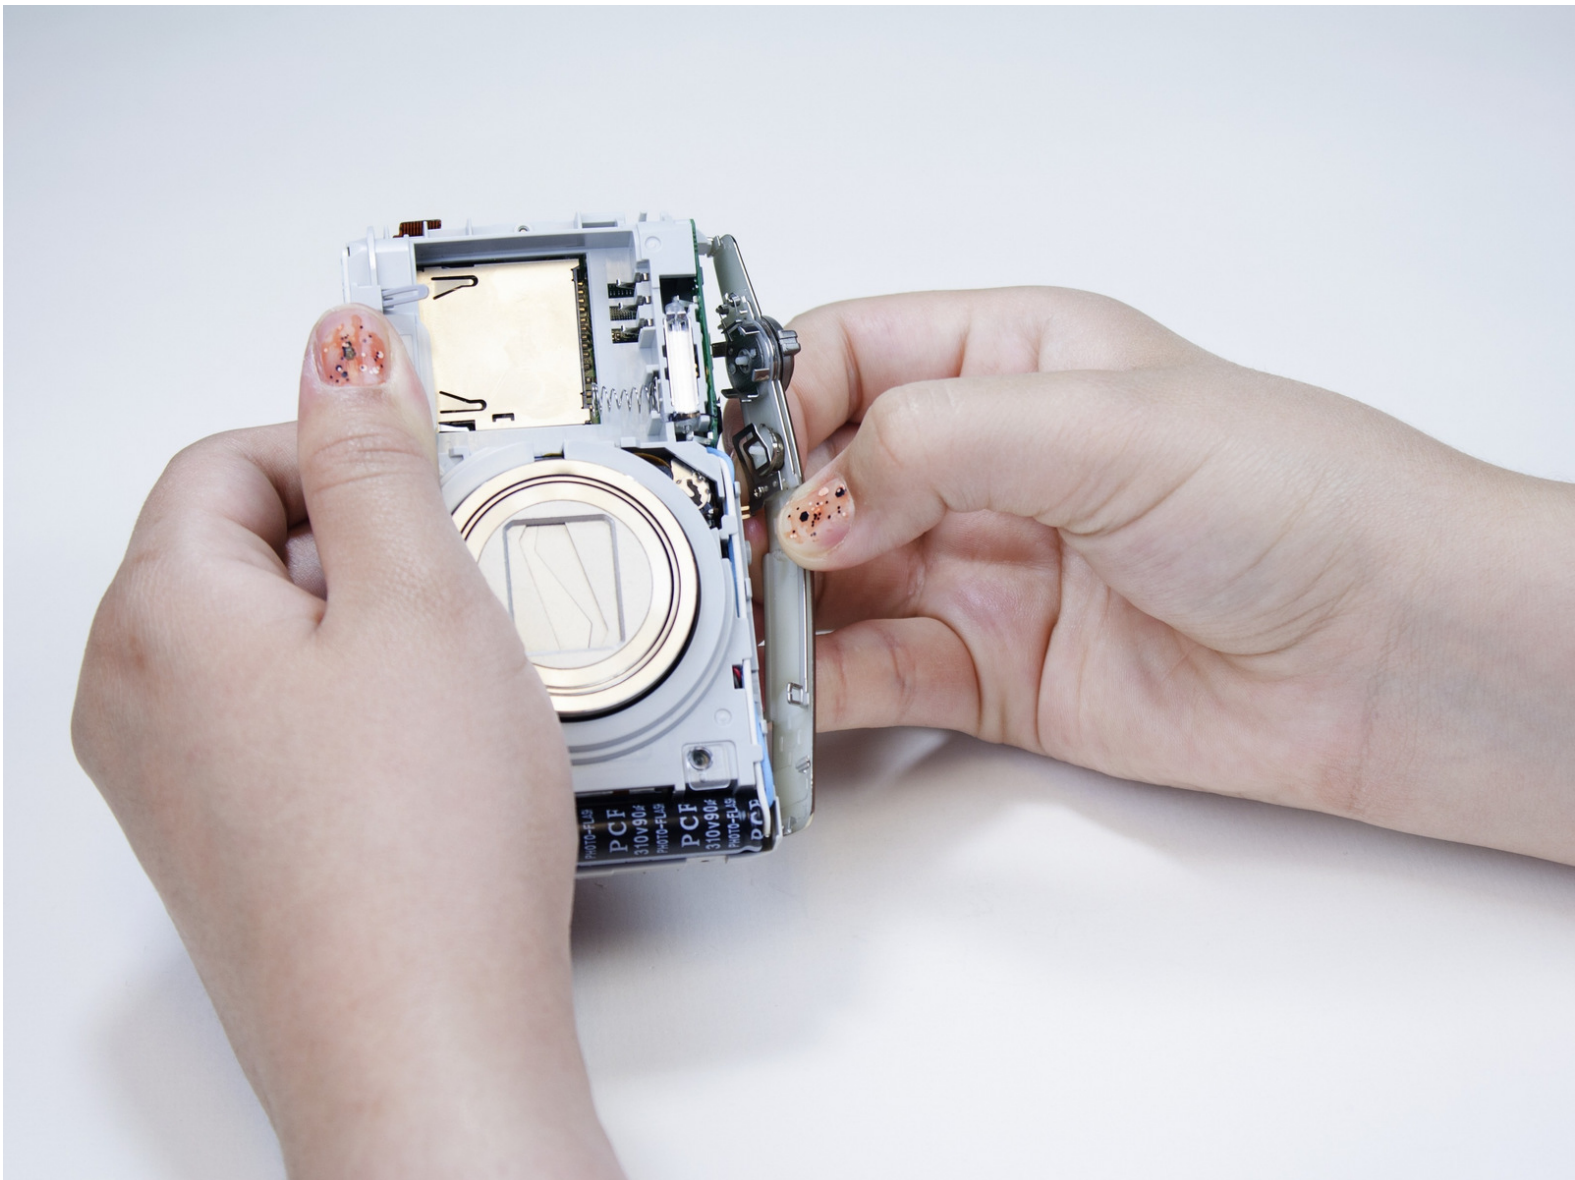

## INTRODUCTION

This guide will show you how to remove the camera's power button so you can replace it if it is not working.



---



### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front Plate

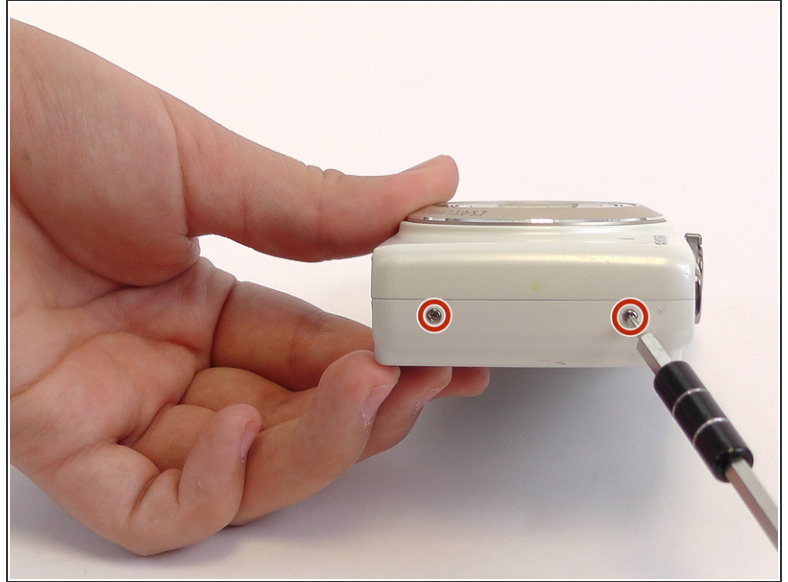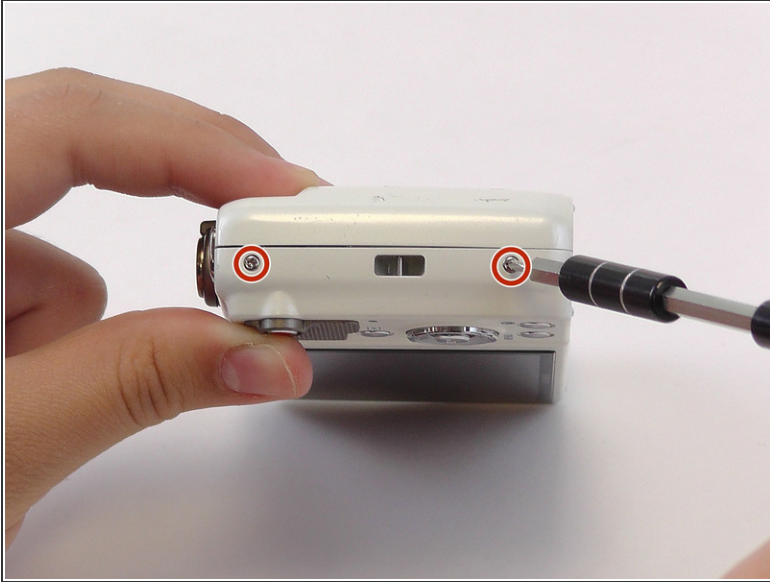

- Remove the two 4mm screws from each side of the camera with a Phillips PH000 screwdriver.


## Step 2

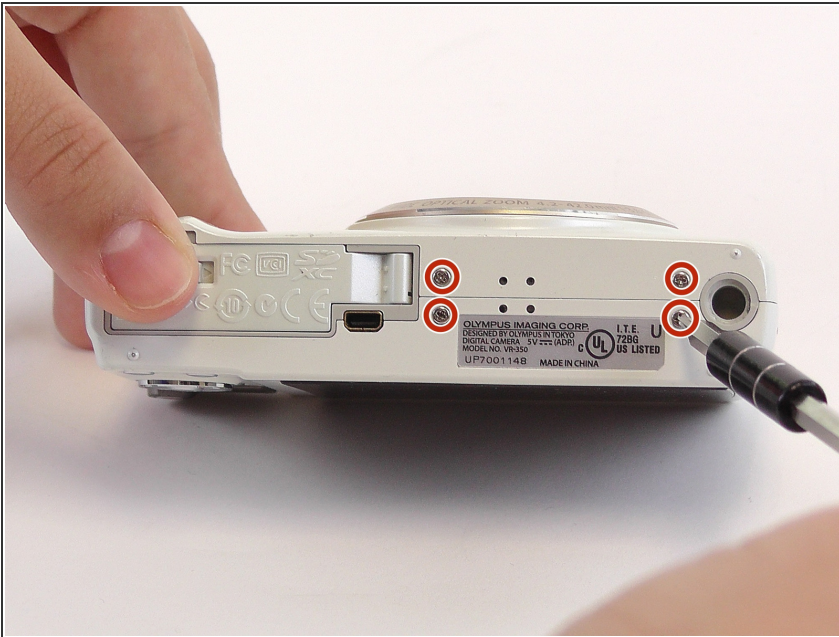

- Remove the four 4mm screws from the bottom of the camera with a Phillips PH000 screwdriver.




## Step 3

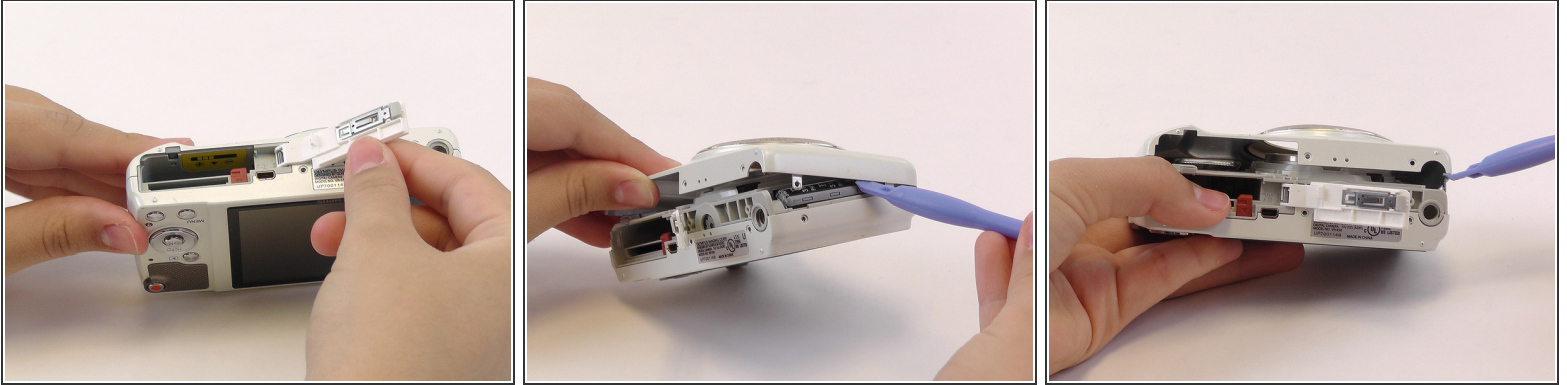

- Use the plastic opening tools and your fingers to pry the front plate from the camera.

**i** You might need to open the battery cover to remove the front plate.

## Step 4 — Back Plate

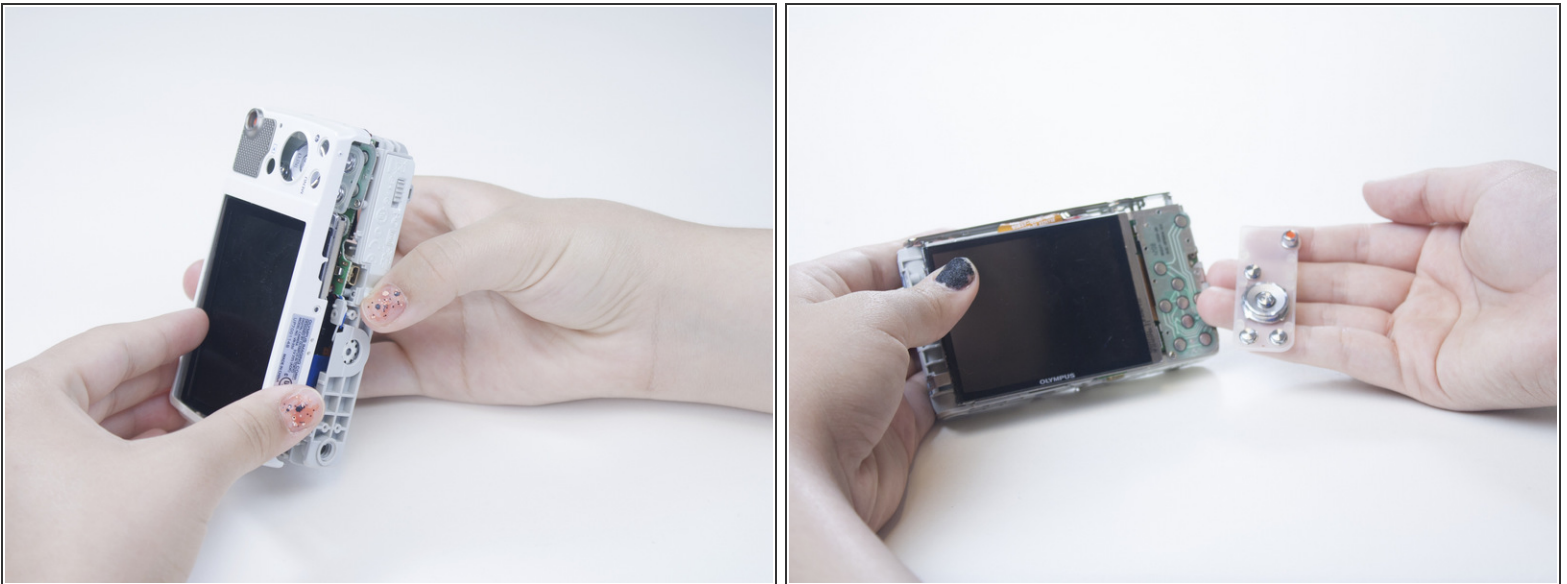


- Use your fingers to pry open the back cover.

**!** When you remove the back of the camera, the button membrane might fall out. Don't lose this sheet.

**!** The LCD screen is connected to the body of the camera by an orange ribbon cable. Don't pull this ribbon cable out.

## Step 5 — Power Button

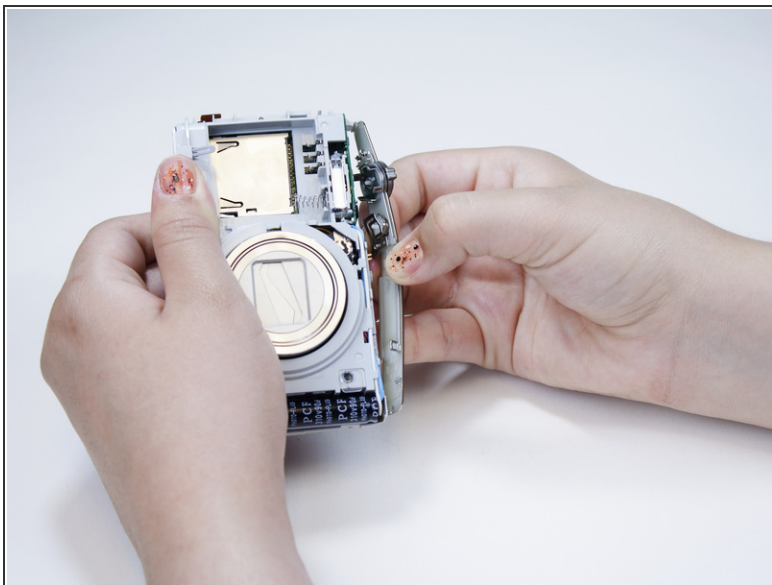

- Remove the silver panel from the top of the camera.

## Step 6



- Flip the silver panel over. The power button is the smaller button covered by a metal backing.

## Step 7



- Pull the metal backing away from the silver panel.

## Step 8



- Push the power button down and out of the silver panel with your finger.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-01 01:39:33 AM.